


# CAT und Soundkarteninterface

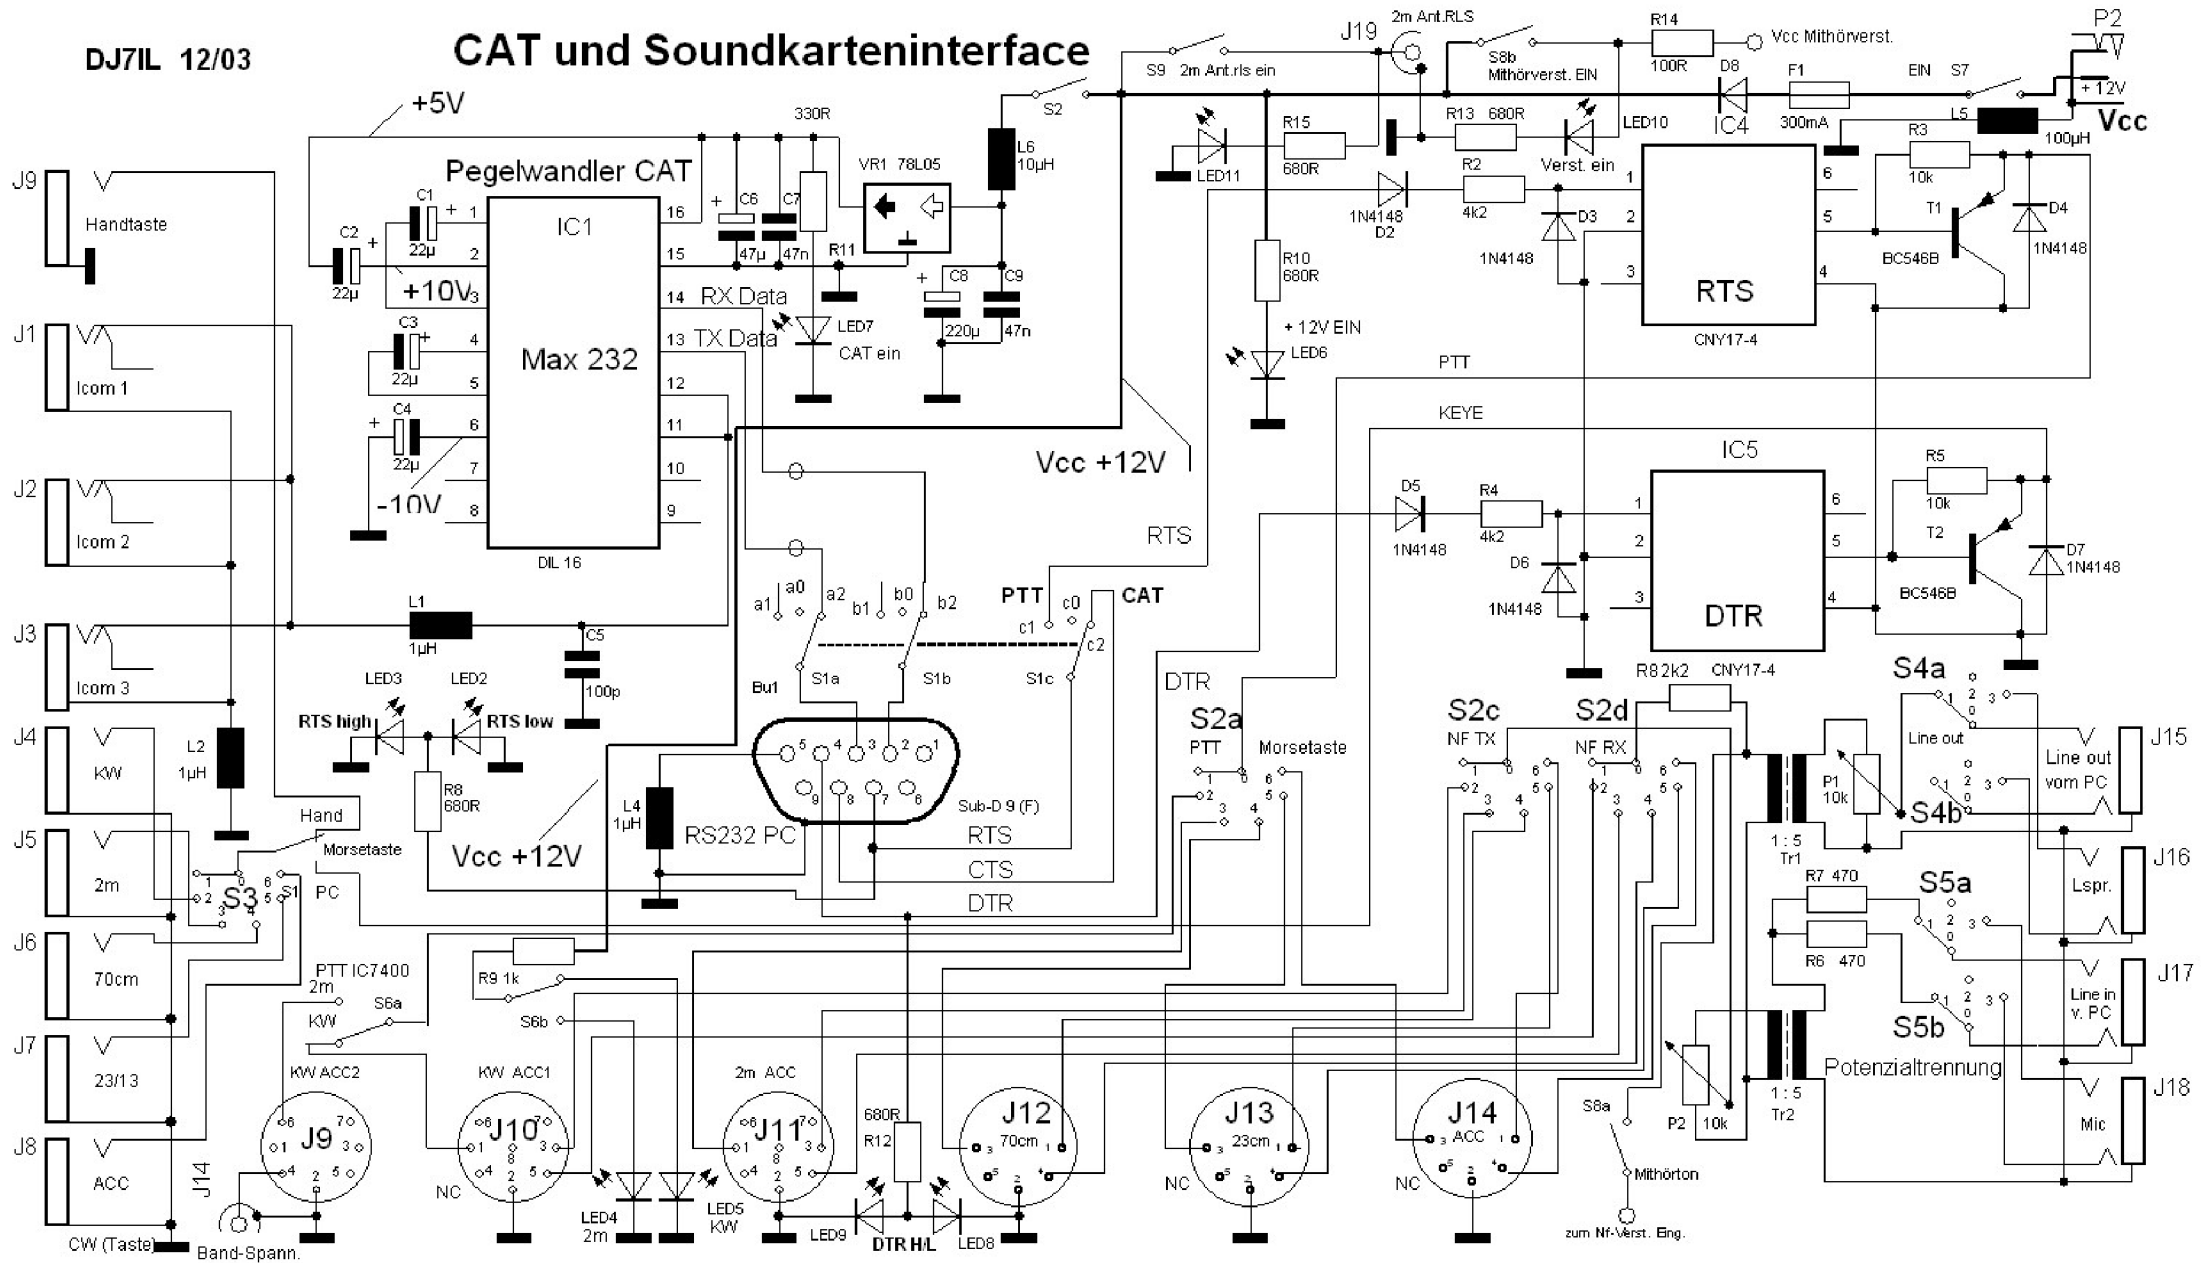

- J9 Handtaste
- J1 Icom 1
- J2 Icom 2
- J3 Icom 3
- J4 KW
- J5 2m
- J6 70cm
- J7 23/13
- J8 ACC
- J9 J14
- J10 J10
- J11 J11
- J12 Sub-D 9 (F)
- J13 70cm
- J14 J14
- J15 Line out vom PC
- J16 Lspr.
- J17 Line in v. PC
- J18 Mic

- CW (Taste)
- Band-Spann.

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc

+12V

Vcc